

RFLS-24

HIGH-FREQUENCY LEVEL SENSOR

with elimination of deposits and foam on electrode in a compact design



- **NEW**
More chemically resistant, all-plastic version (Type 3) for aggressive liquids and fluids (e.g. acids)
- For reliable limit-level sensing of various liquids, slurries and pastes
- Resistant to adhesion of viscous and sticky media (ketchup, yoghurts, spreads, syrups, creams, pastes, cleaning agents, etc.)
- Replacement for vibrating level sensors
- Adjustment by magnetic pen or programming wire
- Universal design for all types of media (electrically conductive and non-conductive)
- High stability at high sensitivity (can be used for substances with $\epsilon_r \geq 1.5$)
- The unique design of the electrode system does not require an additional internal seal (O-ring)

TECHNICAL PARAMETERS

supply voltage	7 ... 34 V DC	
current consumption	max. 5 mA DC	
output type	PNP (open collector)	
max. switching current (PNP output)	300 mA	
Process temperature range at the process connection point	type 1 and 11	-40 ... +105 °C
	type 3	-10 ... +70 °C
maximum overpressure (relative), type 1 and 11	-40 °C ... +75 °C	-1 ... 100 bar
	+75 °C ... +105 °C	-1 ... 50 bar
maximum overpressure (relative)	type 3	up to 10 bar
process connection	thread G ½, NPT ½	
electrical connection	M12 connector	
protection class	IP 68	
weight (without cable)	type 1 and 11	approx. 0,15 kg
	type 3	approx. 0,06 kg

MATERIALS

housing	electrode type 1, 11	stainless steel W. Nr. 1.4404 (AISI 316L)
	electrode type 3	PP, 30% glass fiber
electrode insulation	electrode type 1, 11	PEEK
	electrode type 3	PP, 30 % glass fiber
M12 connector - CP		polycarbonate
M12 connector - CM		stainless steel W. Nr. 1.4404 (AISI 316L)

BASIC FEATURES AND VARIANTS

The RFLS-24 high-frequency level sensor is designed for industrial use in limit sensing of liquid and pasty media. It can serve as direct replacement for a vibrating level sensor, or a capacitive level sensor for more demanding applications. Media can be electrically conductive or non-conductive with any permittivity.

It can be installed in metal or plastic tanks, filling tanks, sumps, etc.

The sensor is available with a standard (Type 1), extended (Type 11), or plastic (Type 3) electrode section, combined with a plastic (CP) or stainless steel (CM) connector.




VARIANTS

code	sensor type
RFLS-24_-1-_-_-CP	insulated electrode (PEEK) - sensing various liquids - slurries and pastes, oils - Plastic connector with LED indication
RFLS-24_-11-_-_-CP	insulated electrode (PEEK) • extended electrode - sensing various liquids - slurries and pastes, oils - Plastic connector with LED
RFLS-24_-1-_-_-CM	insulated electrode (PEEK) - sensing various liquids - slurries and pastes, acids or bases • hardened stainless steel connector
RFLS-24_-11-_-_-CM	insulated electrode (PEEK) • extended electrode - sensing various liquids - slurries and pastes, acids or bases • hardened stainless steel version
RFLS-24_-3-_-_-CP	all-plastic version (PP 30% glass fiber) - chemically active environments - problematic liquids in plastic tanks - in plastic tanks and reservoirs - contaminated water and sludge, inorganic acids, alkalis, and corrosive liquids.


USE

RFLS-24 level sensor can be mounted horizontally or diagonally in a vessel, tank or pipe shell by screwing into a sleeve or by attaching with a nut. Basic application recommendations are listed below.


Thanks to its design, the sensor is suitable for level detection of viscous and electrically conductive media (yoghurt, marmalades, mayonnaise, spreads, liquid soaps, creams or pastes). After setting the sensitivity to the medium, the sensor reacts reliably to the presence or absence of the medium level. Conversely, the sensor does not react to residues and deposits of viscous media on the measuring electrode.

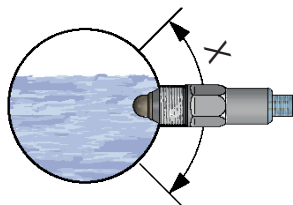





X = Recommended sensor orientation in piping

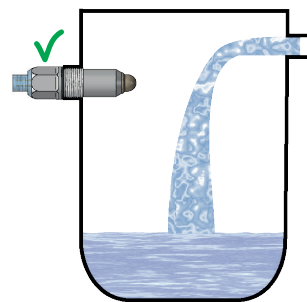

Correct sensor orientation in tanks

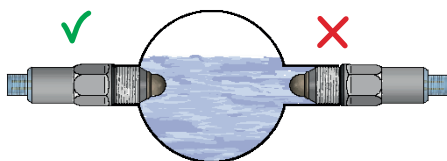

Correct and incorrect installation of the sensor into the pipe socket

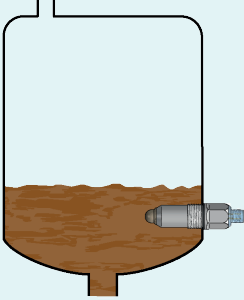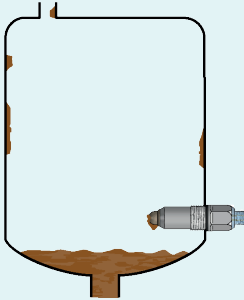
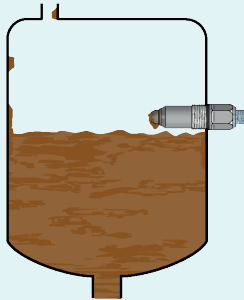
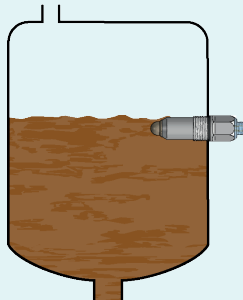
Setting modes			
The sensor can be set to normally closed "O-mode" or to normally open "C-mode" switch types.			
minimum level - mode O		maximum level - mode C	
			
closed	open	closed	open
			
lit*	unlit*	lit*	unlit*

For safety reasons, we recommend using the „O“ mode setting for sensing the minimum level (the sensor switches on when flooded). A failure of the sensor or wiring will be indicated here as an emergency level condition by disconnecting the sensor.

By analogy, for max. level, we recommend setting the mode „C“ (the sensor switches off when flooded).

*LED indication only for CP variant, not valid for CM

DIMENSIONS

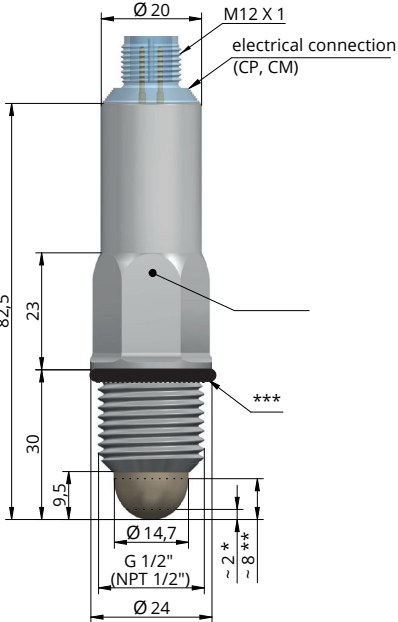
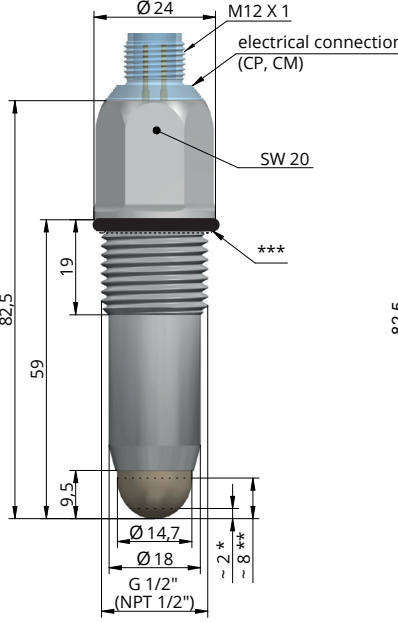
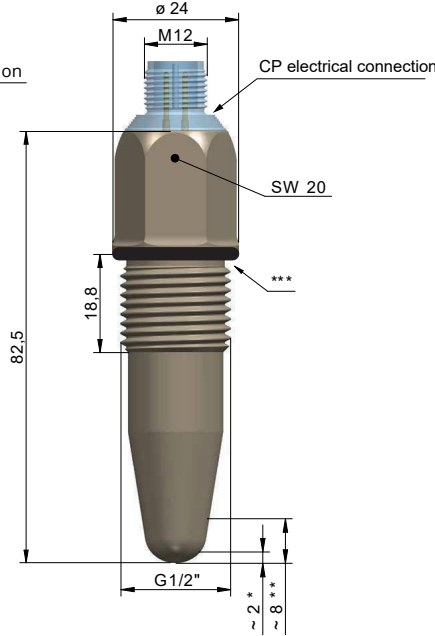
RFLS-24N-1	RFLS-24N-11	RFLS-24N-3
		

* Typical switching point position for water (factory setting)
 ** Typical switching point position for oil (factory setting)
 *** Supplied with EPDM gasket as standard


ELECTRICAL CONNECTION

RFLS-24N-_-_-CP

RFLS-24N-_-_-CM

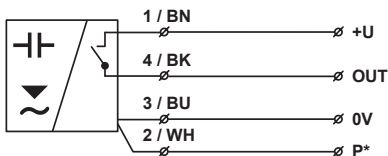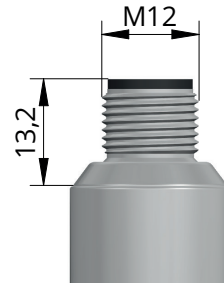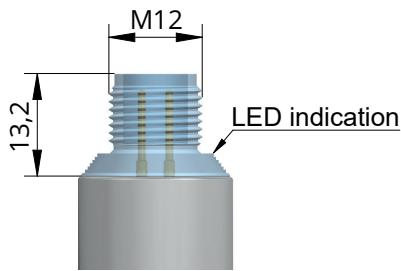

Wiring of RFLS-24 sensor with PNP Output
* Programming wire

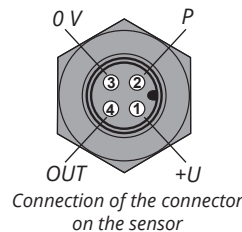

Legend:
BK - black (OUT)
BN - brown (+U)
BU - blue (0V)
WH - white (P)

SETTING ELEMENTS

Setting elements

Used to adjust the sensitivity and behaviour of the sensor.

1) Locally using a magnetic pen (CP variant)

which is attached to the magnetically sensitive ON or OFF spots on the sensor.

2) Remotely by programming wire (CP and CM variant)

via the DSU-1222-AP power supply unit. Remote parameterization allows the same setting options as the magnetic pen setting.

Display elements (CP variant)

Used to display the sensor status.

1) Green LED

flashing - (approx. 0.4 sec.) - correct level detection function

not illuminated - incorrect installation or malfunction

2) Orange LED


illuminated - the sensor is closed

not illuminated - the sensor is open

3 short flashes - confirmation of setting

alternating flashing of green and orange LEDs - setting error

simultaneous illumination of green and orange LEDs - during the application of the mag. pen when the setting is confirmed

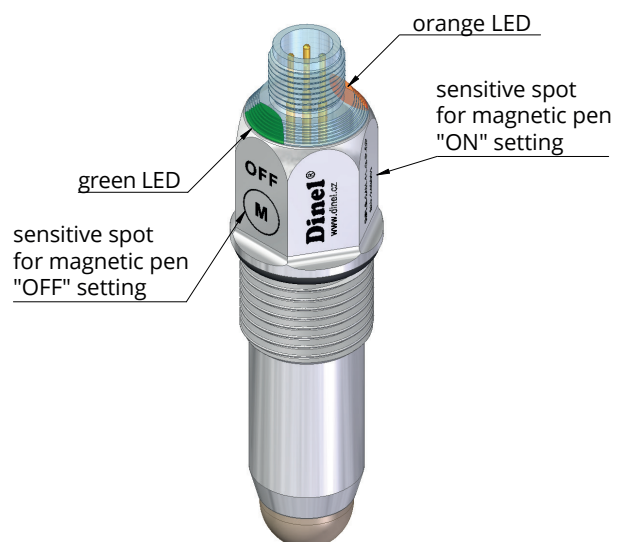

ORDER CODE

RFLS-24

PERFORMANCE

N non-explosive areas

ELECTRODE TYPE

- 1** coated electrode (PEEK)
- 11** coated electrode (PEEK) - extended electrode section
- 3** all-plastic version PP 30%, only electrical connection CP

PROCESS CONNECTION

- G** front mounting, thread G ½
- NPT** front mounting, thread NPT ½, not compatible with electrode type 3

OUTPUT TYPE

- P** PNP (open collector)

TYPE OF ELECTRICAL CONNECTION

- CP** standard plastic connector, thread M12 (LED indication)
- CM** standard stainless steel connector, thread M12 (hardened variant), not compatible with electrode type 3

RFLS-24 N - 11 - G - P - CP

EXAMPLE OF CODING

RECOMMENDED POWER SUPPLY AND SWITCHING UNIT

- power supply of sensors - converting their status to power contact - remote parameterization	at extra cost	DSU-1222-AP	
--	---------------	-------------	---

ACCESSORIES

magnetic pen (1 pc) (CP variant only)	included in the price	MP-8	
o-ring EPDM	included in the price		
disassemble socket	at extra cost	ELKA 4012	
disassemble socket	at extra cost	ELWIKA 4012	
cable with ELWIKA connector three-core without programming wire option	at extra cost	KV 4312	
cable with ELWIKA connector four-core with programming wire option	at extra cost	KV 4412	
different types of seals: o-rings (FPM, NBR) USIT rings (FPM, NBR) aluminium seals	at extra cost		
weld flange G 1/2	at extra cost		
fixing nut G 1/2	at extra cost		



Dinel, s.r.o.
U Tescomy 249, 760 01 Zlín
tel.: +420 577 002 000
e-mail: sale@dinel.cz

www.dinel.cz

version:
08/2026





HIGH-FREQUENCY LIMIT LEVEL SENSOR RFLS-24





CONTENTS

- 1. Basic Description5
- 2. Variants od sensors5
- 3. Dimensional Drawings6
- 4. Putting into operattion.....6
- 5. Electrical Connection7
- 6. Adjusting and Signaling Elements.....8
- 7. Status Signaling9
- 8. Settings..... 10
 - 8.1. Basic Setting with the Presence of Medium with Magnetic Pen 11
 - 8.2. Basic Setting with the Presence of Medium with DSU-1222-AP Unit 12
 - 8.3. Quick Setting Without the Presence of Medium with Magnetic Pen..... 13
 - 8.4. Quick Setting Without the Presence of Medium with DSU-1222-AP Unit..... 14
- 9. Mechanical Installation 15
- 10. Order Code 17
- 11. Recommended Power Supply and Display Unit 18
- 12. Accessories 18
- 13. Safety, Protection and Compatibility 19
- 14. Use, Manipulation and Maintenance 19
- 15. Decommissioning or Disposal..... 20
- 16. General Conditions and Warranty..... 20
- 17. Marking of Labels..... 21
- 18. Technical Parameters..... 22
- 19. Packaging, Transport and Storage..... 23

SYMBOLS USED

To ensure maximum safety in the control processes, we have defined the following safety and information instructions. Each instruction is marked with a corresponding pictogram.



Warning, caution, danger

This symbol indicates particularly important instructions for installation and operation of the device or dangerous situations that may arise during installation and operation. Failure to observe these instructions may cause malfunction, damage or destruction of the device or cause injury to health.



Information

This symbol draws attention to particularly important device characteristics and recommendations.



Note

This symbol indicates useful additional information.

SAFETY



All operations described in this instruction manual must be performed only by trained personnel or an authorized person. Warranty and post-warranty repairs must be carried out exclusively by the manufacturer.

The product cannot be used in cases where its failure or malfunction could result in major material damage, damage to health or danger to life.

Incorrect use, installation or adjustment of the sensor can lead to accidents in the application (overflowing of the tank or damage to system components).

The manufacturer is not responsible for incorrect use, loss of work caused by either direct or indirect damage and expenses incurred during installation or use of the sensor.

1. BASIC DESCRIPTION

The **RFLS–24 high-frequency level sensor** is designed for industrial use for limit level sensing of liquid and paste media. The high-frequency level sensor can be a direct replacement for a vibrating fork level switch, or for a capacitive level sensor in the case of more demanding applications. The media can be electrically conductive or non-conductive. It can be installed in metal or plastic tanks, filling containers, sumps, etc.

The sensor operates in the high-frequency band, which enables reliable detection of the medium level and eliminates deposits or foam on the electrode. The sensor suppresses the effect of deposits of viscous media (ketchups, yoghurts, mayonnaises, pâtés, syrups, jams, creams, soaps) as well as electrically conductive adhering media (cleaning agents, lyes, chemicals).

The sensors can be set for:



- simple detection of the presence of a medium (medium / air)
- distinction of the interface of two media (medium 1 / medium 2), e.g. water / oil

The sensor is made of a stainless steel housing with a sensing electrode at one end and a cover with electrical connections at the other end. The sensors are only manufactured for non-explosive areas.

2. VARIANTS OF SENSORS

VARIANTS	
Name	Type
RFLS-24_-1-_-_-CP	insulated electrode (PEEK) , for sensing various liquids, slurries and pastes, also suitable for oils. Plastic connector with LED indication allows setting even with a magnetic pen and visual inspection of sensor functionality
RFLS-24_-11-_-_-CP	insulated electrode (PEEK) with extended electrode part , for sensing various liquids, slurries and pastes, also suitable for oils. Plastic connector with LED indication allows setting even with a magnetic pen and visual inspection of sensor functionality
RFLS-24_-1-_-_-CM	insulated electrode (PEEK) , for sensing various liquids, slurries and pastes, also suitable for acids or bases. The durable stainless steel connector version (without LED indication) is designed for more demanding conditions, setting using a programming cable
RFLS-24_-11-_-_-CM	insulated electrode (PEEK) extended electrode part , for sensing various liquids, slurries and pastes, also suitable for acids or bases. The durable stainless steel connector version (without LED indication) is designed for more demanding conditions, setting with a programming wire

3. DIMENSIONAL DRAWINGS

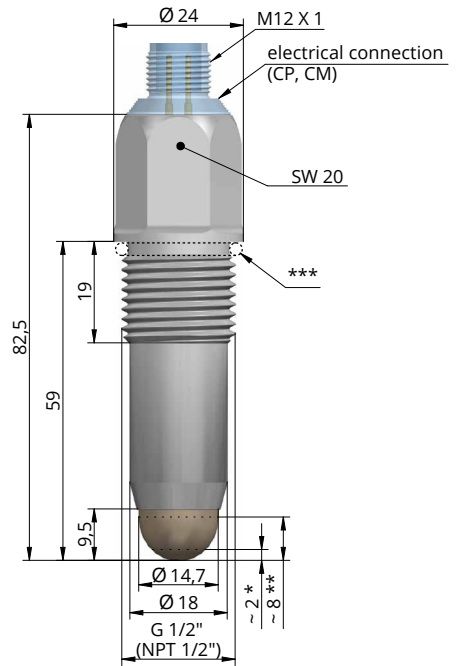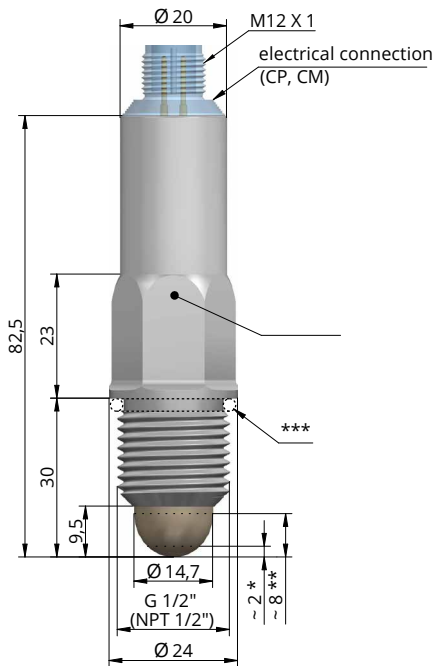

* Typical switch point position for water (factory setting)

**** Typical switch point position for oil (factory setting)**

*** Supplied without outer gasket as standard.

4. PUTTING INTO OPERATION

This procedure has the following three steps:

- **MECHANICAL INSTALLATION** - CHAPTER 9
- **ELECTRICAL CONNECTION** - CHAPTER 5
- **SETTING** - CHAPTER 8

5. ELECTRICAL CONNECTION

RFLS-24 sensors are connected to the evaluation units or binary outputs of PLC by a cable via a standard M12 connector.

Sensors with PNP output type can only be loaded with resistive or inductive loads. Capacitive loads and loads with low quiescent resistance (light bulb) can be evaluated by the sensor as a short circuit.

The connection diagram is shown in the figure below.

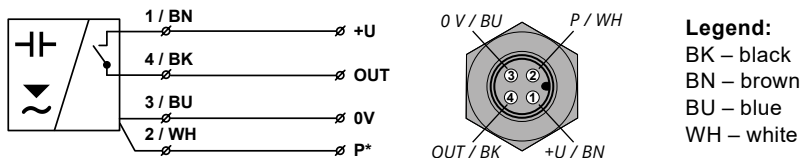


Fig. 1: Connection of RFLS-24 sensor with PNP output type

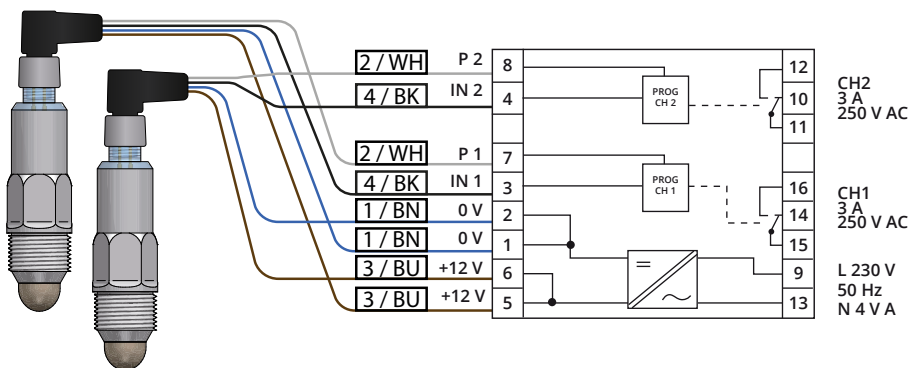


Fig. 2: Connecting the RFLS-24 sensor to the DSU-1222-AP power supply and display unit



The power supply must be designed as a stabilized low-voltage safe voltage source with galvanic isolation. In the case of using a switched-mode power supply, its design must effectively suppress common mode interference on the secondary side. If the switched-mode power supply is equipped with a PE protective terminal, it must be grounded!



Electrical connection can only be made in a voltage-free state!



If the level meter (sensor) is located outdoors at a distance greater than 20 m from an outdoor switchboard or from an enclosed building, the electrical supply to the level meter (sensor) must be supplemented with appropriate surge protection.

In the case of strong ambient electromagnetic interference, the supply cable runs alongside a power line, or its length exceeds 30 m, we recommend using a shielded cable and grounding its shielding on the source side.

6. ADJUSTING AND SIGNALING ELEMENTS



Fig. 3: Position of adjustment and display elements on the sensor (CP version)




Fig. 4: CM version without adjustment and display elements



7. STATUS SIGNALING

function	indication on the sensor
normal operation sensor open	
normal operation sensor closed	
incorrect setting	

8. SETTINGS

The sensor can be set in the switching mode "mode O" or in the breaking mode "mode C".

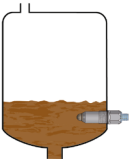minimum level sensing	level	mode	output status	orange LED*
		O	ON	 (lit)
	level	mode	output status	orange LED*
		O	OFF	 (not lit)

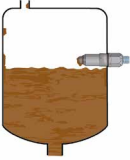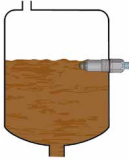maximum level sensing	level	mode	output status	orange LED*
		C	ON	 (lit)
	level	mode	output status	orange LED*
		C	OFF	 (not lit)

*LED indication only for CP variant, not for CM



The sensor retains settings even during a power outage

The sensitivity and switching mode of the RFLS-24 sensor can be set:

- 1) **locally using a magnetic pen (CP version with plastic connector and indication)**, which is attached to the magnetically sensitive ON or OFF pads on the sensor
- 2) **remotely via a setting wire using the DSU-1222-AP power supply unit (all versions)**. Remote parameterization allows the same setting options as setting with a magnetic pen.

8.1. BASIC SETTINGS

WITH MEDIUM WITH A MAGNETIC PEN

(only CP version with plastic connector and indication)

To set the sensitivity and switching mode, when it is possible to flood and flush the sensor with the medium. With this setting, the sensor eliminates the presence of deposits and foam on the electrode.

a) Setting mode O (switches on when flooded)

1. Immerse the sensor electrode in the measured medium (in case of detection of the interface of two media, place the electrode in the lower medium).
2. Place the magnetic pen for 2 - 4 sec on the sensitive surface of the ON sensor until both LEDs light up and then remove the magnetic pen. The sensor is set and the orange LED flashes three times.
3. Remove the sensor from the medium (in case of detection of the interface of two media, place the electrode in the upper medium). Leave any deposits on the electrode.
4. Place the magnetic pen for 2 - 4 sec on the sensitive surface of the OFF sensor until both LEDs light up and then remove the magnetic pen. The sensor is set and the orange LED flashes three times.

Check the status of the indicators: If the orange LED is off and the green LED is flashing, the sensor is set correctly.

If the orange and green LEDs flash alternately, the sensor did not recognize the difference between the flooded and the drained state. Repeat the setting!

b) Setting mode C (opens when flooded)

1. Immerse the sensor electrode in the measured medium (in case of detection of the interface of two media, place the electrode in the lower medium).
2. Place the magnetic pen for 2 - 4 sec on the sensitive surface of the OFF sensor until both LEDs light up and then remove the magnetic pen. The sensor is set and the orange LED flashes three times.
3. Remove the sensor from the medium. (in case of detection of the interface of two media, place the electrode in the upper medium). Leave any deposits on the electrode.
4. Place the magnetic pen for 2 - 4 sec on the sensitive surface of the ON sensor until both LEDs light up and then remove the magnetic pen. The sensor is set and the orange LED flashes three times.

Check the status of the indicators: If the orange LED is on and the green LED is flashing, the sensor is set correctly.

If the orange and green LEDs flash alternately, the sensor has not recognized the difference between the flooded and the drained state.

8.2. BASIC SETTINGS

WITH MEDIUM WITH DSU-1222-AP UNIT

(all versions)

To set the sensitivity and switching mode, when it is possible to flood and flush the sensor with the medium. With this setting, the sensor eliminates the presence of deposits and foam on the electrode.

a) Setting mode O (switches on when flooded)

1. Set the SET CH1 switch (to set the sensor connected to channel 1) or SET CH2 switch (to set the sensor connected to channel 2) or SET CH1 and SET CH2 switch to ON for simultaneous setting of both sensors.
2. Immerse the sensor electrode in the measured medium (if an interface between two media is detected, place the electrode in the lower medium).
3. Set the SET switch to ON.
4. Press the SETTING button for 1 - 3 sec After approx. 2 sec the orange LED on the unit will flash three times, now release the SETTING button.
5. Remove the sensor from the medium (if an interface between two media is detected, place the electrode in the upper medium). Leave any deposits on the electrode.
6. Set the SET switch to OFF.
7. Press the SETTING button for 1 - 3 sec After approx. 2 sec the orange LED on the unit will flash three times, now release the SETTING button.

b) Setting mode C (opens when flooded)

1. Set the SET CH1 switch (to set the sensor connected to channel 1) or SET CH2 switch (to set the sensor connected to channel 2) or SET CH1 and SET CH2 switch to ON position to set both sensors simultaneously.
2. Immerse the sensor electrode in the measured medium (if an interface between two media is detected, place the electrode in the lower medium).
3. Set the SET switch to OFF position.
4. Press the SETTING button for 1 - 3 sec After approx. 2 sec the orange LED on the unit will flash three times, now release the SETTING button.
5. Remove the sensor from the medium (if an interface between two media is detected, place the electrode in the upper medium). Leave any deposits on the electrode.
6. Set the SET switch to ON position.
7. Press the SETTING button for 1 - 3 sec After approx. 2 sec the orange LED on the unit will flash three times, now release the SETTING button.

8.3. QUICK SETTINGS

WITHOUT MEDIUM WITH A MAGNETIC PEN

(only CP version with plastic connector and indication)

This mode is only suitable for verifying the sensor before commissioning in case the measured medium is not available. This setting can be used for sensing non-adherent water-based media.

a) Setting mode O (switches on when flooded) using a magnetic pen

1. The sensor is turned with the measuring electrode into free space.
2. Place the magnetic pen for 5 - 10 sec on the sensitive surface of the ON sensor (first both LEDs light up, after approx. 3 sec the orange LED flashes three times and after another approx. 2 sec the orange LED flashes three times again - now the magnetic pen can be moved away).

The sensor is now set to mode O (switches on when flooded).

b) Setting mode C (opens when flooded) using a magnetic pen

1. The sensor is turned with the measuring electrode into free space.
2. Place the magnetic pen for 5 - 10 sec on the sensitive surface of the OFF sensor (first both LEDs light up, after approx. 3 sec the orange LED flashes three times and after another approx. 2 sec the orange LED flashes three times again - now the magnetic pen can be moved away).

The sensor is now set to mode C (opens when flooded).

8.4. QUICK SETTINGS

WITHOUT MEDIUM WITH DSU-1222-AP UNIT

(all versions)

The RFLS-24 sensor can be set using a programming wire or a special evaluation unit DSU-1222-AP. The evaluation and power supply unit DSU-1222-AP is designed to connect one or two RFLS-24 sensors.

This mode is only suitable for verifying the sensor before commissioning if the measured medium is not available. This setting can be used for sensing non-adherent water-based media.

a) Setting mode O (switches on when flooded) using the DSU-1222-AP unit

1. Set the SET CH1 switch (for setting the sensor connected to channel 1) or SET CH2 (for setting the sensor connected to channel 2) or SET CH1 and SET CH2 to set both sensors simultaneously to the ON position.
2. The sensor is turned with the measuring electrode into free space.
3. Set the SET switch to the OFF position.
4. Press the SETTING button. After approx. 2 sec the orange LED on the unit flashes three times, after a further approx. 3 sec the orange LED flashes three times again, now release the SETTING button.
5. Set the SET CH1 or SET CH2 switch to the OFF position.

The sensor is now set to mode O (switches on when flooded).

b) Setting mode C (opens when flooded) using the DSU-1222-AP unit

1. Set the SET CH1 switch (for setting the sensor connected to channel 1) or SET CH2 (for setting the sensor connected to channel 2) or SET CH1 and SET CH2 to set both sensors simultaneously to the ON position.
2. The sensor is turned with the measuring electrode into free space.
3. Set the SET switch to the ON position.
4. Press the SETTING button. After approx. 2 sec the orange LED on the unit flashes three times, after a further approx. 3 sec the orange LED flashes three times again, now release the SETTING button.
5. Set the SET CH1 or SET CH2 switch to the OFF position.

The sensor is now set to mode C (opens when flooded).



For safety reasons, we recommend setting the "O" mode for minimum level sensing (the sensor switches on when flooded). A sensor or wiring failure will be reflected in the same way as a level emergency by opening the sensor. Similarly, for maximum level sensing, we recommend setting the "C" mode (the sensor switches on when flooded).



Unless otherwise agreed, mode "O" is set on all sensors from the factory.



When using the "quick setup" function, the sensor does not eliminate the presence of deposits and foam on the electrode. The manufacturer recommends performing the Basic Setup at the earliest possible opportunity.

9. MECHANICAL INSTALLATION

RFLS-24 level sensors can be mounted horizontally or obliquely in the shell of a vessel, tank or pipe by screwing into a weld-on fitting or by fastening with a nut. Basic application recommendations are given below.

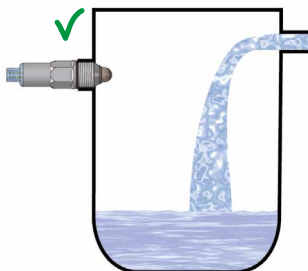


Fig. 5: Correct orientation of sensor installation in tanks

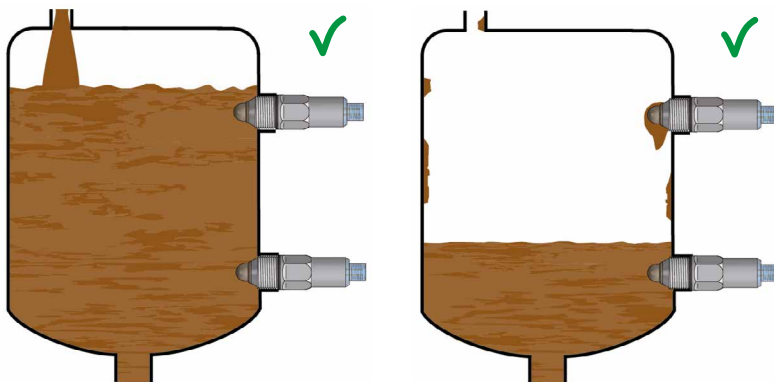


Fig. 6: Lateral installation of sensors in a tank with a viscous medium



When mounted in a metal tank or container, it is not necessary to separately ground the sensor housing.




In the case of sensing aggressive media, it is necessary to check the chemical resistance of the materials from which the sensor is made (see the table Material design on page 22). Any chemical damage is not covered by the warranty.



In the case of placement in a tank at the medium inlet, installation is required out of reach of the filling flow.

It is recommended to install the sensors in horizontal pipes diagonally from the side.

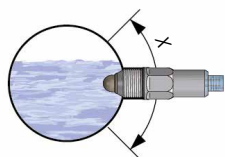

X = Recommended orientation for installing sensors in the pipe

When installing the sensor vertically in a pipe, be careful of the possible formation of an air pocket or adhering liquid residues at the bottom of the pipe.



Fig. 7: Installing the sensor in the pipe

When mounting in the side wall, long nozzles should be avoided, where viscous media could be retained. We recommend mounting the sensor so that the entire measuring electrode is inside the vessel.

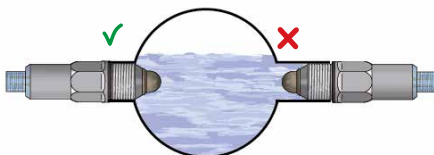


Fig. 8: Correct and incorrect installation of the sensor into the pipe weld

Sensor installation for reliable control of liquid level with foam on the surface. The sensitivity of the sensor can be set to detect the liquid-foam interface. After the liquid level drops, the sensor does not respond to foam deposits on the electrode.

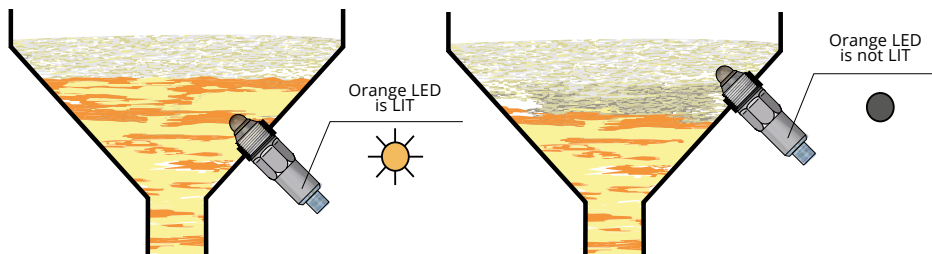


Fig. 9: Monitoring the foaming medium level



When mounted in a metal tank or container, it is not necessary to separately ground the sensor housing.



In the case of sensing aggressive media, it is necessary to check the chemical resistance of the materials from which the sensor is made (see tab. Material design on page 22). The warranty does not cover any chemical damage.



Fig. 10: Examples of installing sensors in a tank

10. ORDER CODE

ORDER CODE									
RFLS-24									
PERFORMANCE									
N non-exlosive areas									
ELECTRODE TYPE									
1 coated electrode (PEEK)									
11 coated electrode (PEEK) - extended electrode section									
PROCESS CONNECTION*									
G front installation, thread G ½									
NPT front installation, thread NPT ½									
OUTPUT TYPE									
P PNP (open collector)									
ZPŮSOB ELEKTRICKÉHO PŘIPOJENÍ									
CP standard plastic connector, thread M12 (LED indication)									
CM standard stainless steel connector, thread M12 (hardened variant)									
RFLS-24	N	-	11	-	G	-	P	-	CP
									EXAMPLE OF CODING

* Supplied without outer gasket as standard.

11. RECOMMENDED POWER SUPPLY AND DISPLAY UNIT

power supply of sensors, conversion of their state to a power contact and remote parameterization	at extra cost	DSU-1222-AP	
--	------------------	-------------	---

12. ACCESSORIES

magnetic pen (1 pc) (CP variant only)	included	MP-8	
detachable connector	at extra cost	M12 CONNECTOR ELKA 4012	
detachable connector	at extra cost	M12 CONNECTOR ELWIKA 4012	
cable with M12 connector three-core without programming wire option	at extra cost	M12 CONNECTOR KV 4312	
cable with M12 connector four-core with programming wire option	at extra cost	M12 CONNECTOR (KV 4412)	
various types of seals:0 o-rings (EPDM, FPM, NBR) USIT rings (FPM, NBR) aluminum seals	at extra cost		
weld flange G 1/2	at extra cost		
Fixing stainless steel nut G 1/2	at extra cost		

13. SAFETY, PROTECTION AND COMPATIBILITY

The level sensor is equipped with protection against fault voltage on the electrode, reverse polarity, short-term overvoltage and current overload at the output.

The product cannot be used in cases where its failure or malfunction could result in major material damage, damage to health or danger to life.

Protection against dangerous contact is ensured by a low safety voltage according to EN 33 2000-4-41. EMC is ensured by compliance with the standards EN 55011/B, EN 61326-1, EN 61000-4-2 to -6 and -8.

A declaration of conformity has been issued for this device in accordance with Act 90/2016 Coll. and subsequent amendments. The supplied electrical equipment meets the requirements of the applicable government regulations on safety and electromagnetic compatibility.

14. USE, MANIPULATION AND MAINTENANCE

The sensor does not require any operator assistance for operation. Maintenance of the device consists of checking the integrity of the sensor and the power cable. Cleaning or sterilization of the sensor (CIP/SIP) is possible under the conditions specified in the technical parameters.



It is forbidden to make any changes or interventions on the RFLS–24 sensor without the consent of the manufacturer. Any repairs must be carried out only by the manufacturer or a service organization authorized by him.

The assembly, installation, commissioning, operation and maintenance of the RFLS–24 sensor must be carried out in accordance with these instructions and the provisions of the valid standards for the installation of electrical equipment must be observed.

Operation during operation:

- If the sensor is connected to an automatic control system or to an emergency alarm system, its settings must not be interfered with in any way during operation.
- If it is necessary to change the sensor settings, the entire system must be temporarily shut down and the process kept in a safe state using other means and measures.
- The signaling of fault conditions is described in the chapters Signaling of statuses.

Operation in the event of a fault

- In the event of faults or fault signals detected, the entire system must be shut down and the process kept in a safe state using other means and measures.
- If the fault requires the sensor to be replaced, the manufacturer must be notified (including a description of the fault).

Sensor repairs:

- If it is necessary to send the sensor for repair, proceed as follows:
- Dismantle and clean the sensor, decontaminate it if necessary and pack it well.
- Write down the most detailed description of the fault, also attach a detailed description of the application and installation location and send everything together with the sensor to the address of Dinel, s.r.o.

We ask for your maximum cooperation in finding the root cause of the problem. Your satisfaction is our priority!

15. DECOMMISSIONING OR DISPOSAL

Dismantling:

Before starting disassembly, consider possible risks such as tank pressure, high temperatures, corrosive properties or toxicity of products, etc.

Read the product manual, chapters "Commissioning procedure" and "Electrical connection" and perform the steps in reverse order.

Disposal:

The RFLS-24 high-frequency limit level sensors are composed of materials that can be recycled by specialized companies. Mark the device as waste and dispose of it according to the relevant government regulations for the management of electronic waste. Materials: see "Technical parameters".

16. GENERAL CONDITIONS AND WARRANTY

The manufacturer guarantees that this product will have the specified properties specified in the technical conditions for a period of 3 years from the date of delivery.

The manufacturer is responsible for defects that were detected during the warranty period and were complained about in writing.

The warranty does not apply to defects caused by incorrect handling or failure to comply with the technical conditions.

The warranty expires if the customer or a third party makes changes or modifications to the product, if the product is mechanically or chemically damaged, or if the serial number is illegible.

To make a complaint, it is necessary to present the warranty certificate.

In the event of a justified complaint, we will repair the defective product or replace it with a new one. In both cases, the warranty period is extended by the repair period.



17. MARKING OF LABELS

The marking is made by laser engraving on the sensor body
Data on the **RFLS-24N-_-_-_-CM** series sensors

Dinel[®]
www.dinel.cz

RFLS-24N-1-G-P-CM
SN:240000



Data on the **RFLS-24N-_-_-_-CP** series sensors



Dinel[®]
www.dinel.cz

RFLS-24N-11-G-P-CP
SN:240000



Description:

Manufacturer's brand: Dinel[®] logo

Internet address: www.dinel.cz

Sensor type: RFLS-24N-_-_-_-

Product serial number: SN: _____ - (from left: year of manufacture, serial number)

Protection: IP68

Conformity mark: CE

Electronic waste collection sign:

18. TECHNICAL PARAMETERS

BASIC TECHNICAL DATA

Supply voltage	7 ... 34 V DC
Current consumption	max. 5 mA DC
Output type	PNP (open collector)
Max. switching current (PNP output)	300 mA
Operating temperature range at the process connection point	-40 ... +105 °C
Maximum overpressure	-1 ... 100 bar
Residual voltage in the switched state	max. 1,5 V
Separation capacity (housing - leads) / dielectric strength	4nF / 500 V AC (50 Hz)
Protection	IP 68
Weight (without cable)	aprox. 0,15 kg
Minimum relative permittivity	$\epsilon_r = 1,5$
Minimum distance of the electrode from the vessel wall	20 mm

MATERIAL DESIGN

sensor part		standard material *
Head (case)		stainless steel W.Nr. 1.4404 (AISI 316L)
M12 connector	version CP	polycarbonate
	version CM	stainless steel W.Nr. 1.4404 (AISI 316L)
Electrode insulation		PEEK

* Verify chemical compatibility with the medium. Other material types can be selected upon agreement.

PROCESS CONNECTION

name	dimension	marking
Pipe thread	G ½	G
NPT thread	NPT ½	NPT

MECHANICAL DESIGN AND SPACE CLASSIFICATION


sensor design	equipment classification
RFLS-24N	Basic design for use in non-explosive environments.

FACTORY SETTINGS

Switching mode	O (switches on when flooded)
Sensitivity	for water sensing

TEMPERATURE AND PRESSURE RESISTANCE – version N

variants	temperature t_p	temperature t_a	maximum overpressure
RFLS-24N-_-_-_-_-	-40 °C ... +75 °C	-40 °C ... +75 °C	100 bar
RFLS-24N-_-_-_-_-	+75 °C ... +105 °C	+75 °C ... +105 °C	50 bar

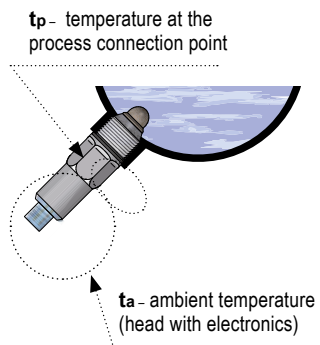

19. PACKAGING, TRANSPORT AND STORAGE

The RFLS–24 device is packed in a polyethylene bag and the entire shipment is placed in a cardboard box. The cardboard box is filled with suitable padding to prevent mechanical damage during transport.

Remove the device from the packaging only before use, to prevent possible damage.

Transport to the customer is carried out by a forwarding company. After prior arrangement, personal collection of the ordered goods at the company's headquarters is also possible. Upon receipt, please check whether the shipment is complete

and corresponds to the scope of the order, or whether the packaging and device were not damaged during transport. Do not use a device that is obviously damaged during transport, but contact the manufacturer to resolve the situation.

If the device is to be transported further, then only packed in the original packaging and protected against shocks and weather conditions.

Store the device in its original packaging in dry areas, protected from weather conditions, with humidity up to 85% without the effects of chemically active substances. The storage temperature range is -10 °C to +50 °C.



Dinel[®] process control

Dinel, s.r.o.

U Tescomy 249

760 01 Zlín

Czech Republic

Phone: +420 577 002 002

E-mail: sale@dinel.cz

www.dinel.cz

The manufacturer reserves the right to change product specifications and appearance without prior notice.

The current version of the manual can be found at www.dinel.cz

version: 03/2025



QMS
ISO 9001

