



DIGITAL PANEL METER N30H TYPE



USER'S MANUAL



Contents

1. APPLICATION AND METER DESIGN	5
2. METER SET.....	6
3. BASIC REQUIREMENTS, OPERATIONAL SAFETY	7
4. INSTALLATION.....	8
5. SERVICE	11
6. RS-485 INTERFACE	27
7. ERROR CODES	41
8. TECHNICAL DATA	42
9. ORDER CODES	44
10. MAINTENANCE AND GUARANTEE.....	46

1. APPLICATION AND METER DESIGN

The N30H meter is a programmable digital panel meter destined for the measurement of d.c. voltage or d.c. current. Additionally, the meter enables the indication of the current time. The readout field is a LED display, which allows the exposition of results in colours: red, green and orange. The measured input signal can be arbitrary converted by means of a 21-point individual characteristic.

Features of the N30H meter:

- display colour individually programmed in three intervals,
- programmable thresholds of displayed overflows,
- 2 NOC relay alarms operating in 6 modes,
- 2 switched relay alarms with a switching contact operating in 6 modes (option),
- signaling of the measuring range overflow,
- automatic setting of the decimal point,
- programming of alarm and analog outputs with the reaction on the chosen input quantity (main or auxiliary input),
- real-time clock with the function of the clock supply support in case of the meter supply decay,
- programmed averaging time – function of walking window with the averaging time up to 1 hour,
- monitoring of set parameter values,
- interlocking of introduced parameters by means of a password,
- recount of the measured quantity on the base of a 21-point individual characteristic,
- service of the interface with MODBUS protocol in the RTU mode (option),
- conversion of the measured value into a standard – programmable current or voltage signal (option),
- highlight of any measuring unit acc. to the order.

- signaling of alarm operation – switching the alarm on causes the highlight of the output number,
- galvanic separation between connectors: alarm, supply, input, analog output connections and RS-485 interface.

Protection degree from frontal side: IP65

Meter overall dimensions: 96 x 48 x 93 mm (with terminals).

The meter casing is made of plastics.



Fig. 1. View of the N30H meter

2. METER SET

The set is composed of:

- N30H meter 1 pc
- User's manual 1 pc
- Guarantee card 1 pc
- Clamps to fix in the panel 4 pcs
- Seal 1 pc

When unpacking the meter, please check whether the type and execution code on the data plate correspond to the order.

3. BASIC REQUIREMENTS, OPERATIONAL SAFETY

In the safety service scope, the N30H meter meets the requirements of the EN 61010-1 standard.



Observations concerning the operational safety

- All operations concerning transport, installation, and commissioning as well as maintenance, must be carried out by qualified, skilled personnel, and national regulations for the prevention of accidents must be observed.
- The programming of N30H meter parameters must be carried out after disconnecting measuring circuits
- Before switching the meter on, one must check the correctness of connections.
- Do not connect the meter to the network through an autotransformer.
- Before removing the meter housing, one must switch the supply off and disconnect measuring circuits.
- The meter is designed to be installed and exploited in electromagnetic industrial environment conditions.
- Non-authorized removal of the housing, inappropriate use, incorrect installation or operation, creates the risk of injury to personnel or meter damage.

For more detailed information, please study the User's Manual.

- When connecting the supply, one must remember that a switch or a circuit-breaker should be installed in the building. This switch should be located near the device, easy accessible by the operator, and suitably marked as an element switching the meter off.

4. INSTALLATION

The meter has separable strips with screw terminals, which enable the connection of external wires of 2.5 mm² cross-section. Strips of input signals are protected against any accidental disconnection by means of a screw joint.

One must prepare a hole of $92^{+0.6} \times 45^{+0.6}$ mm in the panel, which the thickness should not exceed 6 mm.

The meter is adapted to be mounted in a panel. The meter must be introduced from the panel front with disconnected supply voltage. Before the insertion into the panel, one must check the correct placement of the seal. After the insertion into the hole, fix the meter by means of clamps (fig.2).

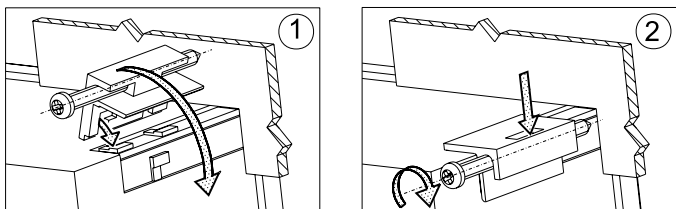


Fig. 2. Meter fixing

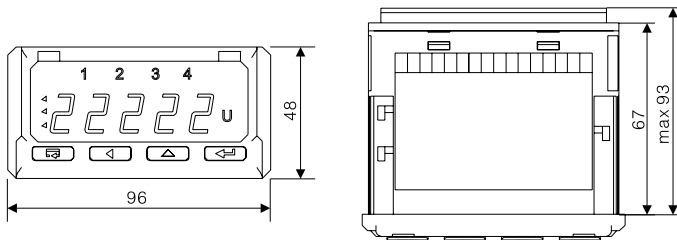


Fig. 3. Overall dimensions

4.1. Signals Leads

signals led out on the meter connectors are presented on the fig. 4. All input signals are separated between them from remaining circuits. Analog outputs are not separated between them. **One don't have to take simultaneously advantage of voltage and current measurements**, since measuring circuits are not galvanically isolated and they are on different potentials.

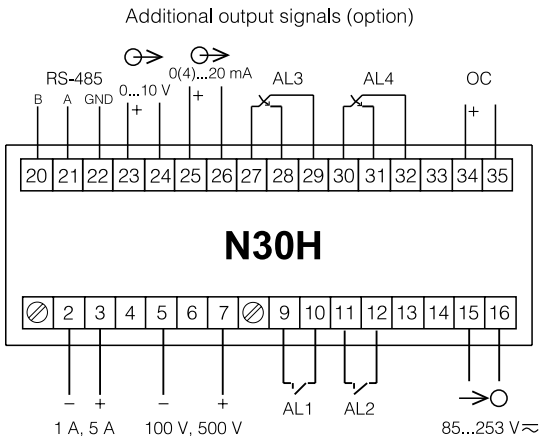


Fig. 4. Description of signals on connection strips

- 1 A, 5 A – terminals for the current measurement on the 1 A or 5 A range.
- 100 V, 500 V – terminals for the voltage measurement on the 100 V or 500 V range.
- OC –output of open collector type with an npn output transistor. The output is turned on in case of a measuring range overflow.

4.2. Examples of Connections

An example of the N30H meter connection for current measurement is presented on the fig. 5.

However, an example of the meter connection in the configuration for voltage measurement is presented on the fig. 6.

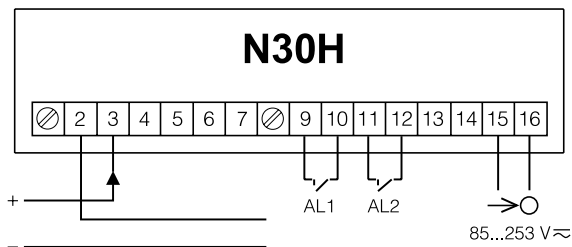


Fig. 5. Meter connection in the configuration for current measurement

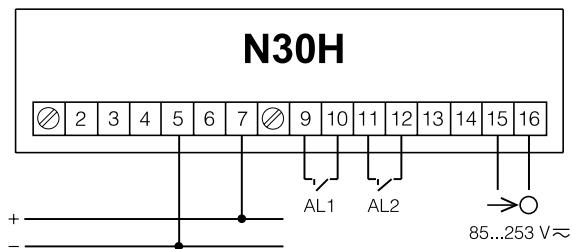


Fig. 6. Meter connection in the configuration for voltage measurement

5. SERVICE

5.1. Display Description

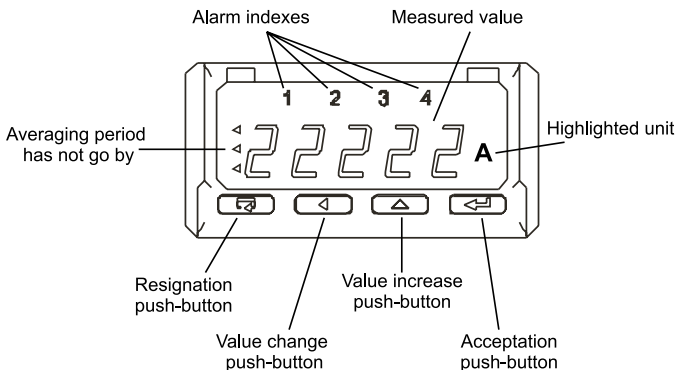


Fig. 7. Description of the meter frontal plate


5.2. Messages after Switching the Supply on

After switching the supply on, the meter displays the meter name N30H, and next the program version in the form „r x.xx” – where x.xx is the number of the current program version or the number of a custom-made execution. Next, the meter carries out measurements and displays the value of the input signal. The meter sets automatically the decimal point position, when displaying the value. The format (number of places after the decimal point) can be limited by the user.


5.3. Functions of Push-buttons

 - Acceptation push-button:


- ⇒ entry in programming mode (press and hold ca 3 seconds)
- ⇒ moving through the menu – level selection,
- ⇒ entry in the mode changing the parameter value,
- ⇒ acceptance of the changed parameter value.
- ⇒ stop the measurement – when holding down the push, the result is not updated. The measurement is still carried out.

 - Push-button increasing the value:



- ⇒ display of maximal value, The pressure of the push-button causes the display of the maximal value during ca 3 seconds.
- ⇒ entry in the level of the parameter group,
- ⇒ moving on the chosen level,
- ⇒ change of the chosen parameter value – increasing the value.



 - Push-button to change the digit:



- ⇒ display of minimal value, The pressure of the push-button causes the display of the maximal value during ca 3 seconds.
- ⇒ entry in the level of parameter group,
- ⇒ moving through the chosen level,
- ⇒ change of chosen parameter value – shift on the next digit,


 - Resignation push-button:


- ⇒ entry in the menu monitoring the meter parameters (press and hold ca 3 seconds),
- ⇒ exit from the menu monitoring meter parameters,
- ⇒ resignation of the parameter change,
- ⇒ strict exit from the programming mode (press and hold ca 3 seconds).




The pressure of the push-button combination   and holding down them during ca 3 seconds causes the deletion of alarm signaling. This operation acts only when the support function is switched on.

The pressure of the push-button combination   causes the erasing of the minimal value.

The pressure of the push-button combination   causes the erasing of the maximal value.

The pressure and holding down the  push-button during ca 3 seconds causes the entry to the programming matrix. The programming matrix can be protected by a safety code.

The pressure and holding down the  push-button during ca 3 seconds causes the entry to the menu monitoring meter parameters.

One must move through the monitoring menu by means of  and  push-buttons. In this menu, all programmable meter parameters are available only for readout. In this mode, the menu **Ser** is not available. The exit from the monitoring menu is carried out by means of the  push-button. In the monitoring menu, parameter symbols are displayed alternately with their values.

The service algorithm of the meter is presented on the fig. 8.

The appearance of the symbols mentioned below on the display means:



- Incorrectly introduced safety code.



- Overflow of the upper measuring range.



- Overflow of the lower measuring range.

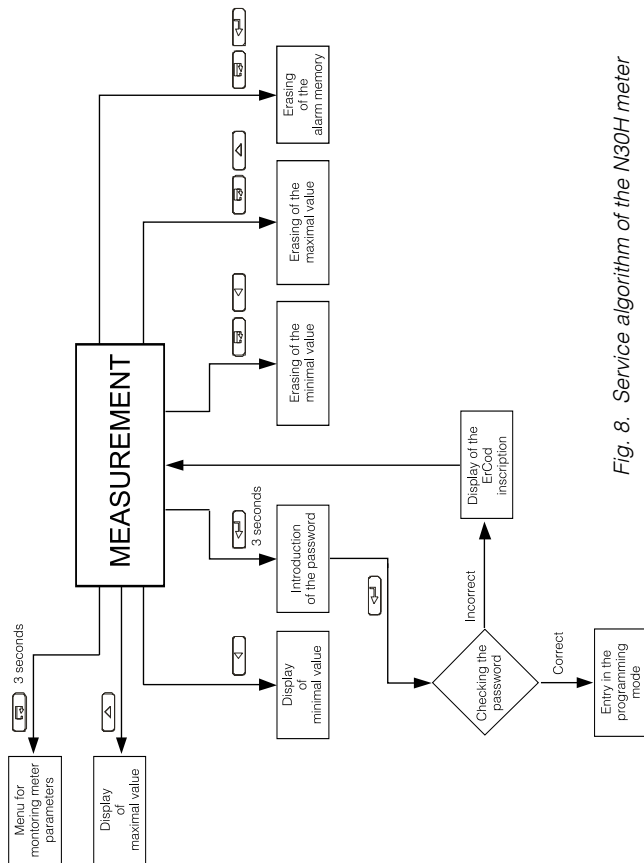












Fig. 8. Service algorithm of the N30H meter

5.4. Programming



The pressure of the  push-button and holding it down through ca 3 seconds causes the entry to the programming matrix. If the entry is protected by a password, then the safety code symbol **SEC** is displayed alternately with the set value **0**. The write of the correct code causes the entry to the matrix, the write of an incorrect code causes the display of the **ErCod** inscription. The matrix of transitions to the programming mode is presented on the fig. 9. The choice of the level is made by means of the  push-button, however the entry and moving through the parameters of the chosen level is carried out by means of the  and  push-buttons. Parameter symbols are displayed alternately with their current values. In order to change the value of the chosen parameter, one must use the  push-button. For resignation from change, one must use the  push-button. In order to exit from the chosen level, one must chose the ----- symbol and press the  push-button. To exit from the programming matrix, one must press during ca 1 second the  push-button. Then, the inscription **End** appears for ca 3 seconds and the meter transits to the display of the measured value. In case of leaving the meter in the parameter programming mode, the automatic abandon of the programming mode (the parameter and next the menu) follows after 30 seconds and the meter transits to display the measured value.

5.4.1. Value Change Way of the Chosen Parameter


In order to increase the value of the chosen parameter, one must press the  push-button. A single pressure of the push, causes the increase of the value of 1. The increase of value when displaying the digit 9, causes the set of 0 on this digit (or the minus mark in case of the oldest display digit). The change of the cursor position after pressing the  push-button. In order to accept the set parameter,



Item	Inp1 Parameters of main input	tYP1 Type of Measured quantity	Cnt1 Measu- rement time	-----	Y First point of the individ. charact. Point y.	...	H21 Last point of the character- istic	Y21 Last point of the character- istic	-----	ovrLo Lower overflow	ovrHi Upper overflow	-----
1	Ind Parameters of individ. charact.	IndCp Number of points of individ. charact.	H1 First point of the individ. charact. Point x.	-----	Y First point of the individ. charact. Point y.	...	H21 Last point of the character- istic	Y21 Last point of the character- istic	-----	ovrLo Lower overflow	ovrHi Upper overflow	-----
2	dISP Display Parameters	d_P Minimal decimal point	ColDo Lower colour	ColBe Middle colour	ColUp Upper colour	ColLo Lower thres- hold of colour change	ColHi Upper threshold of colour change	ColLo Lower thres- hold of colour change	ColHi Upper threshold of colour change	ovrLo Lower overflow	ovrHi Upper overflow	-----
3	ALr1 Alarm 1	P_A1 Type of input quantity for alarm 1	PrL1 Lower threshold	PrH1 Upper threshold	tYP1 Alarm type	dLY1 Alarm delay	LED1 Signaling support	LED1 Signaling support	-----	-----	-----	-----
4	ALr2 Alarm 2	P_A2 Type of input quantity for alarm 1	PrL2 Lower threshold	PrH2 Upper threshold	tYP2 Alarm type	dLY2 Alarm delay	LED2 Signaling support	LED2 Signaling support	-----	-----	-----	-----
5	ALr3 Alarm 3	P_A3 Type of input quantity for alarm 1	PrL3 Lower threshold	PrH3 Upper threshold	tYP3 Alarm type	dLY3 Alarm delay	LED3 Signaling support	LED3 Signaling support	-----	-----	-----	-----
6	ALr4 Alarm 4	P_A4 Type of input quantity for alarm 2	PrL4 Lower threshold	PrH4 Upper threshold	tYP4 Alarm type	dLY4 Alarm delay	LED4 Signaling support	LED4 Signaling support	-----	-----	-----	-----
7	Out Outputs	P_An Type of quantity of analog output	AnL Lower threshold of the analog output	AnH Upper threshold of the analog output	tYP_A Kind of output (volt/curr)	bAud Baud rate	prot Kind of frame	prot Kind of frame	addr Device address	-----	-----	-----
8	SEr Service	Set Write the standard parameters	SEC Introduction of the password	Hour Setup of the time	unit Highlight the unit	tEST Display test	tEST Display test	-----	-----	-----	-----	-----


Fig. 9. Programming matrix

one must hold down the  push-button. Then, the write of the parameter follows and the display of its symbol alternately with the new value. The pressure of the  push-button during the change of the parameter value will cause the resignation of the write.

5.4.2. Changing Floating-point Values

The change is carried out in two stages (the transition to the next stage follows after pressing the  push-button:

- 1) setting values from the range -19999M...99999, similarly as for integral values;
- 2) setting decimal point positions (00000., 0000.0, 000.00, 00.000, 0.0000); the  push-button shifts the decimal point to the left, however the  push shifts the decimal point to the right;

The pressure of the  push-button during the change of the parameter value will cause the resignation of the write.

5.4.3. Characteristic of Programmed Parameters

Programmed parameters and the range of their quantity changes are presented in the table below.

Table 1

InP 1		
Parameter symbol	Description	Range of changes
tYP1	Kind of the connected input signal	500U – input 500 V. 100U – input 100 V 5A – input 5 A. 1A – input 1 A. HoUr – current time.
Cnt1	The measurement time is expressed in seconds. The result on the display presents the mean value counted in the Cnt1 period. This parameter is not taken into consideration during the measurement in the HoUr modes.	1...3600

Table 2

Ind		
Parameter symbol	Description	Range of changes
IndCp	Number of points of the individual characteristic. For a value less than 2, the individual characteristic is switched off. The number of segments is the number of points decreased of one. The individual characteristic is not taken into consideration in the HoUr modes.	1...21
Xn	The point value for which we will expect Yn (n-point number)	-19999...99999
Yn	Expected value for Xn.	-19999...99999

Table 3



dISP		
Parameter symbol	Description	Range of changes
d_P	Minimal position of the decimal point when displaying the measured value - display format. This parameter is not taken into consideration during the CoUntH and HoUr modes.	0.0000 – 0 00.000 – 1 000.00 – 2 0000.0 – 3 00000 – 4
CoLdo	Display colour, when the displayed value is less than CoLLo.	rEd – red grEEen – green orAnG -orange
CoLbE	Display colour, when the displayed value is higher than CoLLo and less than CoLHi.	
CoLuP	Display colour when the displayed value is higher than CoLHi	
CoLLo	Lower threshold of colour change	-19999..99999
CoLHi	Upper threshold of colour change	-19999..99999
ovrLo	Lower threshold of the display narrowing. Values below the declared threshold are signaled on the display by the symbol.  .	-19999..99999
ovrHi	Upper threshold of display narrowing. Values above the declared threshold are signaled on the display by the symbol.  .	-19999..99999

Table 4

ALr1, ALr2, ALr3, ALr4		
Parameter symbol	Description	Range of changes
P_A1 P_A2 P_A3 P_A4	Input quantity, steering the alarm.	InP1 – Main input (indicated value). HoUr – real time clock
tYP1 tYP2 tYP3 tYP4	Alarm type. Fig. 12 presents the graphical imaging of alarm types.	n-on – normal (transition from 0 to 1), n-oFF – normal (transition from 1 to 0), on – switched on, oFF – switched off, H-on – manually switched on; till the change time of the alarm type, the alarm output remains switched on for good, H-oFF – manually switched off; till the change time of the alarm type the output alarm remains switched off for good.
PrL1 PrL2 PrL3 PrL4	lower Alarm threshold.	-19999...99999
PrH1 PrH2 PrH3 PrH4	upper Alarm threshold.	-19999...99999
dLY1 dLY2 dLY3 dLY4	Delay of alarm switching.	-19999...99999




LEd1 LEd2 LEd3 LEd4	<p>Support of alarm signalling. In the situation when the support function is switched on, after the alarm state retreat, the signalling diode is not blanked. It signals the alarm state till its blanking moment by means of the   push-button combination. This function concerns only and exclusively the alarm signaling, thus relay contacts will operate without support according to the chosen type of alarm.</p>	oFF – function switched off oN – function switched on
--	--	--

Table 5

out		
Parameter symbol	Description	Range of changes
P_An	Input quantity, on which the analog output has to react..	InP1 – main input (indicated value). InP2 – input of the auxiliary counter.
AnL	Lower threshold of the analog output. One must give the value, for which we want to obtain the minimal value of signal on the analog output.	-19999...99999
AnH	Upper threshold of the analog output. One must give the value on which we want to obtain the maximal value of signal on the analog output(10 V or 20 mA).	-19999...99999
tYPA	Analog output type.	0_10U – napięciowe 0..10V 0_20A – prądowe 0..20mA 4_20A – prądowe 4..20mA

bAud	Baud rate of the RS485 interface	4.8 – 4800 bit/s 9.6 – 9600 bit/s 19.2 – 19200 bit/s 38.4 – 38400 bit/s 57.6 – 57600 bit/s 115.2 – 115200 bit/s
prot	Type of transmission frame of the RS-485 interface.	r8n2 r8E1 r8o1 r8n1
Addr	Address in the MODBUS network. The write of the value 0 switches the interface off.	0...247

Table 6

SEr		
Parameter symbol	Description	Range of changes
SEt	Write of manufacturer's settings. The setting of the value YES causes the write of standard parameters into the meter. The value of manufacturer's parameters is presented in the table 7.	no – do nothing. Yes – causes the write of manufacturer's settings.
SEC	Introduction of a new password. The introduction of the value 0 switched the password off.	0...60000
HOUR	Setting of the current time. The introduction of a wrong time cancels the introduction of time. The introduced value will not be collected.	0.00...23.59
unlt	Backlighting of the unit.	On – unit highlight switched on. Off – unit highlight switched off.
tEst	Display test. The test consists of a successive lighting up of digital display segments. Alarm diodes and unit highlighting diodes should be lighted .	Yes – causes the test start. The pressure of the  push-button ends the test. no – do nothing.

5.4.4 Individual Characteristic

N30H meters can recalculate the measured value into any value thanks to the implemented individual characteristic function. The individual characteristic rescales the input signal measured according to the set characteristic. The way of the individual characteristic interaction on the meter operation has been presented on the fig. 10.

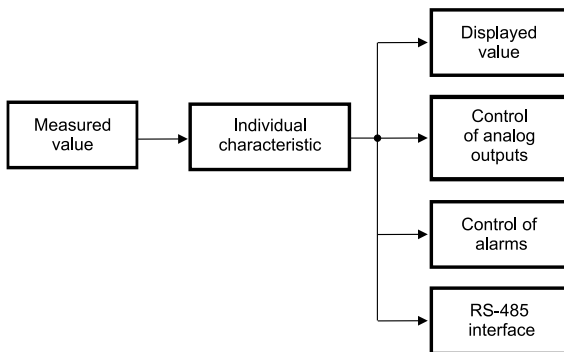


Fig. 10. Action of the individual characteristic

The user can introduce maximally twenty linearizing functions by giving points defining intervals of the given function operation and expected values for successive points. On the base of given points and corresponding values to them, coefficients a and b of recalibrating straight lines are calculated. The programming of the individual characteristic consists on the definition of the number of points which the input function will be linearized by. One must remember that the number of linearizing functions is less of one than the number of points. Next, one must program successive points by giving the measured value (H_n) and the expected value corresponding to it, – value, which has to be displayed (Y_n). The graphic interpretation of the individual characteristic is presented on the fig. 11..

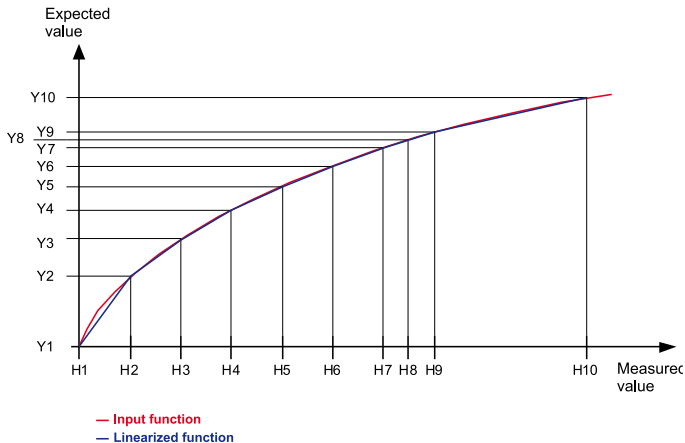


Fig. 11. Individual characteristic

During the function approximation, one must remember that for the approximation of functions strongly differing from the linear characteristic, the higher the number of linearizing segments, the smallest the error related to the linearization.

If measured values are smallest from H1 then, recalculations will be made on the base of the first straight line calculated on the base of points (H1, Y1) and (H2, Y2). However, for values higher than Hn (where n – the last declared measured value) the value to display will be calculated on the base of the last assigned linear function.

Note: All introduced points of the measured value (Hn) must be arranged in the increasing sequence, such to preserve the following dependence:

$$H1 < H2 < H3... < Hn$$

If the above is not fulfilled, the individual characteristic function will be automatically switched off (will not be realized) and a diagnostic flag will be set in the status register.

5.4.5 Alarm Types

The N30U meter is equipped with 2 alarm outputs with NOC contact (make contact) and two alarm outputs with NOC/NCC contact (make and break contact) (option). Each of alarms can work in one of the six modes. The work of alarms in modes is presented in the fig. 12. : n-on, n-off, on, off. Two remaining modes : h-on and h-off mean respectively, always switched on and always switched off. These modes are destined for the manual simulation of alarm states.

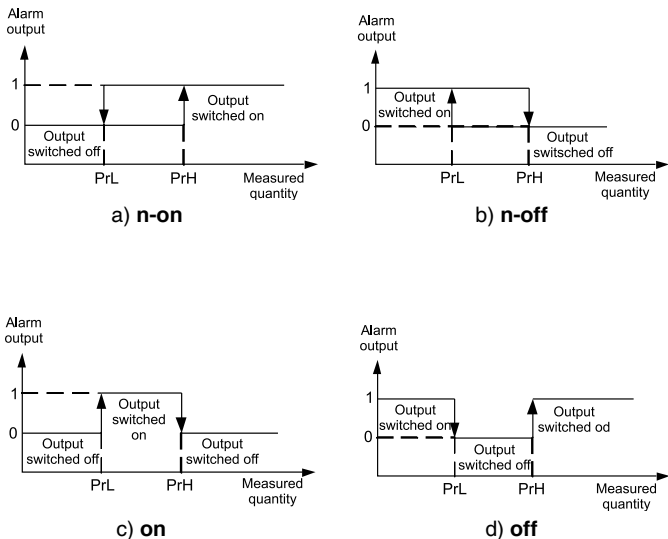


Fig. 12. Alarm types: a) n-on, b) n-off c) on d) off.

Caution !



- In case of alarms of **n-on, n-off, on, off** types, the write of **PrL>PrH** will cause the alarm switching off.
- In case of a measuring range overflow, the reaction of the relays is compatible with written **PrL, PrH, tYP** parameters. In spite of the displayed overflow, the meter still carries out the measurement.
- The meter controls currently the value of the introduced parameter at the moment. In case when the introduced value overflows the upper range given in the table 1, the meter will make automatically the change into the maximal value. Similarly, in case when the introduced value overflows the lower change range given in the table 1, the meter will make automatically the change into the minimal value.

5.4.6 Display Format

The N30H meter adapts automatically the display format (precision) to the value of measured quantity. So that the function could be fully used, one must choose the format 0.0000, then the meter will display the measured value with the possible highest accuracy. This function does not operate for the time display, where the format is set automatically. The current time (HOUR mode) is displayed in the 24 hours' format, in the form hh.mm, where hh – current time, and mm – current minute..

5.5. Manufacturer's Parameters

Standard settings of the N30U meter are presented in the table 8. These settings can be restored by means of the meter menu through the choice of the option **Set** from the menu **Ser**.

Table 7

Parameter symbol	Level in the matrix	Standard value
tYP1	1	500U
Cnt1	1	1
indCP	2	no
H0	2	0
Y0	2	0
H1	2	100
Y1	2	100
...
Hn	2	$(n-1)*100$
Yn	2	$(n-1)*100$
d_P	3	0000.0
CoLdo	3	grEEEn
CoLbE	3	orAng
CoLuP	3	rEd
CoLLo	3	50.00
CoLHi	3	80.00
ovrLo	3	-19999
ovrHi	3	99999
P_A1, P_A2, P_A3, P_A4	4, 5, 6, 7	lnP1
tYP1, tYP2, tYP3, tYP4	4, 5, 6, 7	h-off
PrL1, PrL2, PrL3, PrL4	4, 5, 6, 7	1000
PrH1, PrH2, PrH3, PrH4	4, 5, 6, 7	2000

dLY1, dLY2, dLY3, dLY4,	4, 5, 6, 7	0
LEd1, LEd2, LEd3, LEd4	4, 5, 6, 7	oFF
P_An	8	lnP1
tYPA	8	0_10U
AnL	8	0
AnH	8	99999
bAud	8	9.6
prot	8	r8n2
Addr	8	1
SEt	9	no
SEC	9	0
HOUR	9	not defined
unit	9	off
tESt	9	off

6. RS-485 INTERFACE

N30H programmable digital meters have a serial link in RS-485 standard for the communication in computer systems and with other devices fulfilling Master function. An asynchronous communication character protocol MODBUS has been implemented on the serial link. The transmission protocol describes ways of information exchange between devices through the serial link.

6.1. Connection Way of the Serial Interface

The RS-485 standard allows to a direct communication of 32 devices on a single serial link of 1200 m long (at baud rate 9600 b/s). For the connection of a higher quantity of devices, it is necessary to apply additional intermediate-separating systems (e.g. PD51 converter).

The lead wire of the interface line is presented on the fig. 4. To obtain a correct transmission, it is necessary to connect lines A and B in parallel with their equivalents in other devices. The connection must be made through a shielded wire. The wire shield must be connected to the protection terminal in the nearest possible neighbourhood of the meter (connect the shield to a single point to the protection terminal).

The GND line serves to the additional protection of the interface line at long connections. Then, one must connect GND signals of all devices to the RS-485 bus.

To obtain the connection to the computer, a RS-485 interface card or an appropriate converter is indispensable, e.g. PD51 or PD10.

The connection way of devices is shown on the fig. 13

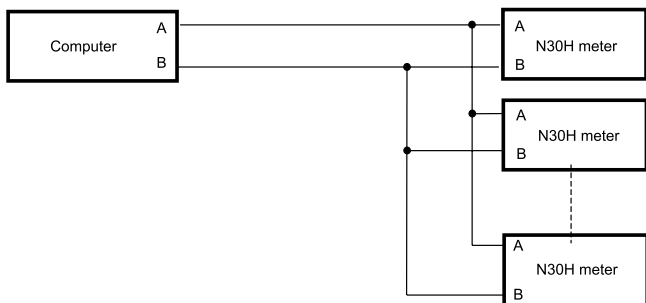


Fig. 13. Connection way of the RS-485 interface

The designation of transmission lines for the card in the PC computer depends on the card producer.

6.2. Description of the MODBUS Protocol Implementation.

The implemented protocol is in accordance with the PI-MBUS-300 Rev G of Modicon Company specification.

Set of the serial link parameters of N30U meters in MODBUS protocol:

- meter address: 1...247,
- baud rate: 4800, 9600, 19200, 38400, 57600, 115200 bit/s,
- work mode: RTU with a frame in formats: 8N2, 8E1, 8O1, 8N1,
- maximal response time: 100 ms.

The parameter configuration of the serial link consists on the settlement of the baud rate (**bA**ud parameter), device address (**Addr** parameter), and the format of the information unit (**Prot** parameter).

Notice:

Each meter connected to the communication network must have:

- unique address, different from addresses of other devices connected to the network,
- identical baud rate and type of information unit.

6.3 Description of Applied Functions

Following functions of the MODBUS protocol have been implemented in the N30U meter:

- 03 – Readout of n-registers.
- 16 – Write of n-registers.
- 17 – Identification of the slave device.

6.4 Register Map

The register map of the N30H meter is presented below.

Notice:

All given addresses are physical addresses. In some computer programs logical addressing is applied, then addresses must be increased of 1.

Table 8

Range of addresses	Value type	Description
4000-4049	integer (16 bits)	Value placed in a 16-bit register.
7000-7025	float (32 bits)	Value placed in two successive 16-bit registers. Registers include the same data as 32-bit register from the area 7500. Registers are only for readout.
7200-7363	float (32 bits)	Value placed in two successive 16-bit registers. Registers include the same data as 32-bit register from the area 7600. Registers can be read out and written.
7500-7512	float (32 bits)	Value placed in a 32-bit register. Registers are only for readout.
7600-7663	float (32 bits)	Value placed in a 32-bit register. Registers can be read out and written.

6.5. Registers for Write and Readout

Table 9

The value is placed in 16-bit registers	Symbol	write (w)/ readout (r)	Range	Description												
4000	tYP1	w/r	0...4	Input type												
				<table border="1"> <thead> <tr> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>500U - voltage measurement in the 500 V range</td> </tr> <tr> <td>1</td> <td>100U - voltage measurement in the 100 V range</td> </tr> <tr> <td>2</td> <td>5A - voltage measurement in the 5 A range</td> </tr> <tr> <td>3</td> <td>1A - voltage measurement in the 1 A range</td> </tr> <tr> <td>4</td> <td>HoUr -current time</td> </tr> </tbody> </table>	Value	Description	0	500U - voltage measurement in the 500 V range	1	100U - voltage measurement in the 100 V range	2	5A - voltage measurement in the 5 A range	3	1A - voltage measurement in the 1 A range	4	HoUr -current time
Value	Description															
0	500U - voltage measurement in the 500 V range															
1	100U - voltage measurement in the 100 V range															
2	5A - voltage measurement in the 5 A range															
3	1A - voltage measurement in the 1 A range															
4	HoUr -current time															
4001		w/r		Reserved												
4002		w/r		Reserved												
4003	Cnt	w/r	1...3600	Measurement time expressed in seconds. This time defines the averaging time of the measured value. The displayed value is the mean value calculated from the Cnt1 period.												
4004		w/r		Reserved												
4005		w/r		Reserved												
4006		w/r		Reserved												
4007		w/r		Reserved												
4008	IndCp	w/r	1...21	Number of points of the individual characteristic. For the value 1, the individual characteristic is switched off. Segments of the individual characteristic are defined by parameters Xn and Yn, where n – point number..												
4009	d_P	w/r	0...4	Minimal position of the decimal point when displaying the measured value.												
				<table border="1"> <thead> <tr> <th>Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0.0000</td> </tr> <tr> <td>1</td> <td>00.000</td> </tr> </tbody> </table>	Value	Description	0	0.0000	1	00.000						
Value	Description															
0	0.0000															
1	00.000															

				2	000.00
				3	0000.0
				4	00000
4010	CoLdo	w/r	0...2	Display colour when the displayed value is less than coLLo	
				Value	Description
				0	red
				1	green
				2	orange
4011	CoLbE	w/r	0...2	Display colour when the displayed value is higher than coLLo and less than CoLHI	
				Value	Description
				0	red
				1	green
				2	orange
4012	CoLUp	w/r	0...2	Display colour when the displayed value is higher than coLHI	
				Value	Description
				0	red
				1	green
				2	orange
4013	P_a1	w/r	0, 1	Input quantity controlling the alarm	
				Value	Description
				0	Main input
				1	Clock
4014	tyP1	w/r	0...5	Type of alarm 1 (description - fig. 6)	
				Value	Description
				0	n-on
				1	n-off
				2	on
				3	off
				4	h-on
				5	h-off
4015	dLY1	w/r	0...120	Delay of alarm 1 (in seconds)	

4016	LEd1	w/r	0...1	Support of alarm 1 signalling	
				Value	Description
				0	Support switched off
				1	Support switched on
4017	P_a2	w/r	0, 1	Input quantity controlling the alarm	
				Value	Description
				0	Main input
				1	Clock
4018	tyP2	w/r	0...5	Type of alarm 2 (description - fig. 6)	
				Value	Description
				0	n-on
				1	n-off
				2	on
				3	off
				4	h-on
				5	h-off
4019	dLY2	w/r	0...120	Delay of alarm 2 (in seconds)	
4020	LEd2	w/r	0...1	Support of alarm 2 signalling	
				Value	Description
				0	Support switched off
				1	Support switched on
4021	P_a3	w/r	0, 1	Input quantity controlling the alarm	
				Value	Description
				0	Main input
				1	Clock
4022	tyP3	w/r	0...5	Type of alarm 3 (description - fig. 6)	
				Wartość	Opis
				0	n-on
				1	n-off
				2	on
				3	off
				4	h-on
				5	h-off
4023	dLY3	w/r	0...120	Delay of alarm 3 (in seconds)	

4024	LEd3	w/r	0...1	Support of alarm 3 signalling	
				Value	Description
				0	Support switched off
				1	Support switched on
4025	P_a4	w/r	0, 1	Input quantity controlling the alarm	
				Value	Description
				0	Main input
				1	Clock
4026	tyP4	w/r	0...5	Type of alarm 4 (description - fig. 6)	
				Value	Description
				0	n-on
				1	n-off
				2	on
				3	off
				4	h-on
				5	h-off
4027	dLY4	w/r	0...120	Delay of alarm 4 (in seconds)	
4028	LEd4	w/r	0...1	Support of alarm 4 signalling	
				Value	Description
				0	Support switched off
				1	Support switched on
4029	P_an	w/r	0, 1	Input quantity, which the analog output has to react on.	
				Value	Description
				0	Main input
				1	Clock
4030	tYPa	w/r	0...2	Type of analog output	
				Value	Description
				0	Voltage input 0...10 V
				1	Current input 0...20 mA
				2	Current input 4...20 mA
4031	bAud	w/r	0...5	Baud rate	
				Value	Description
				0	4800 bit/s
				1	9600 bit/s
				2	19200 bit/s

				3	38400 bit/s
				4	57600 bit/s
				5	115200 bit/s
4032	prot	w/r	0...3	Transmission mode	
				Value	Description
				0	RTU 8N2
				1	RTU 8E1
				2	RTU 8O1
				3	RTU 8N1
4033	Addr	w/r	0...247	Meter address. The write of the value 0 causes the interface switching off.	
4034	sAvE	w/r	0...1	Update transmission parameters. Causes the application of introduced RS-485 interface settings..	
4035	SEt	w/r	0...1	Write of standard parameters	
				Value	Description
				0	without changes
				1	set standard parameters
4036	SEc	w/r	0...6000	Password for parameters	
				Value	Description
				0	without password
				...	Entry in parameters preceded by a request about the password
4037	hour	w/r	0...2359	Current time	
				This parameter occurs in the ggmm format, where: gg - means hours, mm - means minutes. The introduction of a wrong hour will cause the setting 23, however the introduction of wrong minutes will generate the setting of the value 59.	
4038	unit	w/r	0, 1	Switch on/off the unit backlight	
				Value	Description
				0	Highlighting switched off
				1	Highlighting switched on
...	Reserved	
4048	Status1	w/r	0...65535	Meter status. Describes the current state of the meter. Successive bits present data of the event. The bit set on 1 means, that the event took place. Events can be only erased.	
				Bit 15	Break of the supply
				Bit 14	Re-set of the RTC clock.

				Bit 13	Not used
				Bit 12	Lack of communication with data memory
				Bit 11	Wrong settings
				Bit 10	Manufacturer's setting restored
				Bit 9	Lack of measured values in data memory
				Bit 8	Not used
				Bit 7	Output plate was detected
				Bit 6	Output plate - error or lack of calibration
				Bit 5	Not used
				Bit 4	Not used
				Bit 3	Wrong configuration of the individual character.
				Bit 2	Not used
				Bit 1	Not used
				Bit 0	Not used
4049	Status2	w/r		Meter status. Describes the current state of the meter. Successive bits present data of the event. The bit set on 1 means, that the event took place. Events can be only deleted.	
				Bit 15	Not used
				Bit 14	Not used
				Bit 13	Not used
				Bit 12	Not used
				Bit 11	Not used
				Bit 10	Not used
				Bit 9	Not used
				Bit 8	Not used
				Bit 7	LED4 - Signalling of alarm No.4
				Bit 6	LED3 - Signalling of alarm No.3
				Bit 5	LED2 - Signalling of alarm No.2
				Bit 4	LED1 - Signalling of alarm No.1
				Bit 3	Status of the alarm relay No.4
				Bit 2	Status of the alarm relay No.3
Bit 1	Status of the alarm relay No.2				
Bit 0	Status of the alarm relay No.1				

Table 10

The value is placed in two successive 16-bit registers. These registers include the same data as 32-bit registers from the area 7600.	The value is placed in 32-bit registers	Symbol	write (w) /read-out (r)	Range	Description
7200	7600	coLLo	w/r	-19999...99999	Lower threshold of the display colour change
7202	7601	coLHI	w/r	-19999...99999	Upper threshold of the display colour change
7204	7602	ovrLo	w/r	-19999...99999	Lower threshold of the display narrowing
7206	7603	ovrHI	w/r	-19999...99999	Upper threshold of the display narrowing
7208	7604	PrL 1	w/r	-19999...99999	Lower threshold of alarm 1
7210	7605	PrH 1	w/r	-19999...99999	Upper threshold of alarm 1
7212	7606	PrL 2	w/r	-19999...99999	Lower threshold of alarm 2
7214	7607	PrH 2	w/r	-19999...99999	Upper threshold of alarm 2
7216	7608	PrL 3	w/r	-19999...99999	Lower threshold of alarm 3
7218	7609	PrH 3	w/r	-19999...99999	Upper threshold of alarm 3
7220	7610	PrL 4	w/r	-19999...99999	Lower threshold of alarm 4
7222	7611	PrH 4	w/r	-19999...99999	Upper threshold of alarm 4
7224	7612	AnL	w/r	-19999...99999	Lower threshold of analog output
7226	7613	AnH	w/r	-19999...99999	Upper threshold of analog output
7228	7614		w/r	-19999...99999	Reserved
7230	7615		w/r	-19999...99999	Reserved
7232	7616		w/r	-19999...99999	Reserved
7234	7617		w/r	-19999...99999	Reserved
7236	7618		w/r	-19999...99999	Reserved
7238	7619		w/r	-19999...99999	Reserved

7240	7620		w/r	-19999...99999	Reserved
7242	7621		w/r	-19999...99999	Reserved
7244	7622	H1	w/r	-19999...99999	Point of the individual characteristic Point No.1.
7246	7623	Y1	w/r	-19999...99999	Expected value for the point No. 1.
7248	7624	H2	w/r	-19999...99999	Point of the individual characteristic Point No. 2.
7250	7625	Y2	w/r	-19999...99999	Expected value for the point No. 2.
7252	7626	H3	w/r	-19999...99999	Point of the individual characteristic Point No. 3.
7254	7627	Y3	w/r	-19999...99999	Expected value for the point No. 3.
7256	7628	H4	w/r	-19999...99999	Point of the individual characteristic Point No.4.
7258	7629	Y4	w/r	-19999...99999	Expected value for the point No. 4.
7260	7630	H5	w/r	-19999...99999	Point of the individual characteristic Point No. 5.
7262	7631	Y5	w/r	-19999...99999	Expected value for the point No. 5.
7264	7632	H6	w/r	-19999...99999	Point of the individual characteristic Point No. 6.
7266	7633	Y6	w/r	-19999...99999	Expected value for the point No. 6.
7268	7634	H7	w/r	-19999...99999	Point of the individual characteristic Point No. 7.
7270	7635	Y7	w/r	-19999...99999	Expected value for the point No. 7.
7272	7636	H8	w/r	-19999...99999	Point of the individual characteristic Point No. 8.
7274	7637	Y8	w/r	-19999...99999	Expected value for the point No. 8.
7276	7638	H9	w/r	-19999...99999	Point of the individual characteristic Point No. 9.
7278	7639	Y9	w/r	-19999...99999	Expected value for the point No. 9.
7280	7640	H10	w/r	-19999...99999	Point of the individual characteristic Point No.10.
7282	7641	Y10	w/r	-19999...99999	Expected value for the point No. 10.
7284	7642	H11	w/r	-19999...99999	Point of the individual characteristic Point No. 11.
7286	7643	Y11	w/r	-19999...99999	Expected value for the point No. 11.
7288	7644	H12	w/r	-19999...99999	Point of the individual characteristic Point No. 12.

7290	7645	Y12	w/r	-19999...99999	Expected value for the point No. 12.
7292	7646	H13	w/r	-19999...99999	Point of the individual characteristic Point No. 13.
7294	7647	Y13	w/r	-19999...99999	Expected value for the point No. 13.
7296	7648	H14	w/r	-19999...99999	Point of the individual characteristic Point No. 14.
7298	7649	Y14	w/r	-19999...99999	Expected value for the point No. 14.
7300	7650	H15	w/r	-19999...99999	Point of the individual characteristic Point No. 15.
7302	7651	Y15	w/r	-19999...99999	Expected value for the point No. 15.
7304	7652	H16	w/r	-19999...99999	Point of the individual characteristic Point No. 16.
7306	7653	Y16	w/r	-19999...99999	Expected value for the point No. 16.
7308	7654	H17	w/r	-19999...99999	Point of the individual characteristic Point No. 17.
7310	7655	Y17	w/r	-19999...99999	Expected value for the point No. 17.
7312	7656	H18	w/r	-19999...99999	Point of the individual characteristic Point No. 18.
7314	7657	Y18	w/r	-19999...99999	Expected value for the point No. 18.
7316	7658	H19	w/r	-19999...99999	Point of the individual characteristic Point No. 19.
7318	7659	Y19	w/r	-19999...99999	Expected value for the point No. 19.
7320	7660	H20	w/r	-19999...99999	Point of the individual characteristic Point No. 20.
7322	7661	Y20	w/r	-19999...99999	Expected value for the point No. 20.
7324	7662	H21	w/r	-19999...99999	Point of the individual characteristic Point No. 21.
7326	7663	Y21	w/r	-19999...99999	Expected value for the point No. 21.

6.6. Registers only for Readout

Table 11



The value placed in two successive 16-bit registers. These registers include the same data as 32-bit registers from the area 7500	The value is placed in 32-bit registers	Name	Write (w) / readout (r)	Unit	Name of the quantity
7000	7500	Identifier	O	—	Constant identifying the device. The value 187 means the N30H meter
7002	7501	Status	O	—	Status is register describing the current state of the meter
7004	7502	Control	O	%	It is a register defining the control of the analog output
7006	7503	Minimum	O	—	Minimal value of the currently displayed value
7008	7504	Maximum	O	—	Maximal value of the currently displayed value
7010	7505	Displayed value	O	—	Currently displayed value
7012	7506		O	—	Current time
7014	7507		O		Reserved
7016	7508		O	—	Password of analog-to-digital transducer
7018	7509		O		Reserved
7020	7510		O		Measured value – not recalculated In relation to the individual characteristic, a.s.l.
7022	7511		O		Reserved
7024	7512		O		Reserved

7. ERROR CODES

After switching the meter on to the network or during the work, messages about errors can appear.

Messages about errors and their reasons are presented below. .

Table 12

Error message	Description
	Overflow of the upper value of the measuring range value or the programmed indication range.
	Overflow of the lower value of the measuring range value or the programmed indication range.
ErFrt	Communication error with the data memory. One must contact the service workshop.
ErPar	Parameter error. Wrong configuration data. Manufacturer's settings will be restored after pressing any push.
ErdEF	Default settings have been restored. One must press any push to transit to a normal work.
ErFPL	Error of measured values stored by the meter (measured value, maximal and minimal values). One must press any push to transit to a normal work. After pressing the push during 1 sec, the ErdEF message will be displayed.
ErCAo	Lack of calibration of analog outputs. One must press any push to transit to the normal work. Analog outputs will not be serviced. One must contact the service workshop.
ErCOd	Erroneous access code to meter parameters. The error appears in the moment of giving a wrong access code to meter parameters (only in case when meter parameters are protected by a password).

8. TECHNICAL DATA

Measuring ranges.

Table 13

Kind of input	Indication of range	class
500 V	-600...600 V	0.1% of the range
100 V	-200...200 V	0.1% of the range
5 A	-6...6 A	0.1% of the range \pm 5 mA
1 A	-2...2 A	0.1% of the range \pm 1 mA
Current time	00.00...23.59	0.5 seconds/24h

Relay outputs:

- relays, NO voltageless contacts
load capacity 250 V~/0.5A~
- relays, switched voltageless contacts
load capacity 250 V~/0.5A~ (option)

Analog outputs (option):

- programmable, current 0/4...20 mA
load resistance \leq 500 Ω
- programmable, current 0..10 V
load resistance \geq 500 Ω

Alarm output OC (option): output of OC type, passive npn,
30 V d.c./30 mA.

Serial interface: RS-485 (option)

Transmission protocol: MODBUS RTU

Error of analog output: 0.2% of the set range.

Protection grade ensured by the casing:

frontal side IP65
terminal side IP10

Weight:	< 0.2 kg
Dimensions:	96 × 48 × 93 mm

Reference Conditions and Rated Operating conditions:

- supply voltage	85..253 V d.c./a.c. 40..400Hz or 20..40 V d.c./a.c. 40..400Hz
- ambient temperature	-25..23..+55°C
- storage temperature	-33..+70°C
- relative air humidity	25..95% (inadmissible vapour condensation)
- work position	any

Additional errors:

- from temperature changes:	for analog inputs and outputs 50% of the class/10 K
-----------------------------	--

Standards fulfilled by the meter:

Electromagnetic compatibility:

- Noise immunity acc. to EN 61000-6-2
- Noise emission acc. to EN 61000-6-4

Safety requirements:

Acc. to the EN61010-1 standard:

- isolation between circuits: basic,
- installation category: III,
- pollution level: 2,
- maximal phase-to-earth working voltage:
 - 300 V for the supply circuit,
 - for the measuring input 600 V for analog input signals
 - cat. II (300 V – cat. III),
 - 50 V for remaining circuits.
- altitude above sea level < 2000 m.

9. ORDER CODES

Table 14

DIGITAL PANEL METER	N30H -	X	X	XX	XX	X	X
Supply:							
85... 253 V a.c. (45...65 Hz) or d.c.		1					
20... 40 V a.c. (45...65 Hz) or d.c.		2					
Additional outputs:							
lack		0					
OC output, RS-485, analog outputs		1					
OC output, RS-485, analog outputs, switched-over relay outputs		2					
Unit:							
unit code acc. to the table 15				XX			
Version:							
standard					00		
custom-made*					XX		
Language:							
Polish						P	
English						E	
Other*						X	
Acceptance tests:							
without extra requirements							0
with an extra quality inspection certificate							1
Acc. to customer's request*							X

* - after agreeing with the Manufacturer

Order example

The code **N30H - 1 0 01 00 E 0** - means

N30H - programmable N30H panel digital meter

1 - supply: 85...253 V a.c./d.c

0 - lack of additional outputs

01 - unit „V” acc. to the table 2

00 - standard version

E - English language

0 - without extra requirements

Code	Unit	Code	Unit
00	Lack of unit	29	%
01	V	30	%RH
02	A	31	pH
03	mV	32	kg
04	kV	33	bar
05	mA	34	m
06	kA	35	l
07	W	36	s
08	kW	37	h
09	MW	38	m ³
10	var	39	obr
11	kvar	40	szt
12	Mvar	41	imp
13	VA	42	rps
14	kVA	43	m/s
15	MVA	44	l/s
16	kWh	45	obr/min
17	MWh	46	rpm
18	kvarh	47	mm/min
19	Mvarh	48	m/min
20	kVAh	49	l/min
21	MVAh	50	m ³ /min
22	Hz	51	szt/h
23	kHz	52	m/h
24	Ω	53	km/h
25	k Ω	54	m ³ /h
26	°C	55	kg/h
27	°F	56	l/h
28	K	XX	On order 1)

1) - after agreeing with the Manufacturer

10. MAINTENANCE AND GUARANTEE

The N30H digital panel meter does not require any periodical maintenance.

In case of some incorrect operations:

1. **From the Shipping Date, During the Period Given in the Annexed Guarantee Card:**

One should take the meter down from the installation and return it to the Manufacturer's Quality Control Dept. If the meter has been used in compliance with the instructions, the Manufacturer warrants to repair it free of charge.

2. **After the Guarantee Period:**

One should turn over the meter to repair it in a certified service workshop. The disassembling of the casing causes the cancellation of the granted guarantee. Spare parts are available for the period of five years from the date of purchase.

Our policy is one of continuous improvement and we reserve the right to make changes in design and specifications of any products as engineering advances or necessity requires and revise the above specifications without notice.

SALES PROGRAM

- DIGITAL and BARGRAPH PANEL METERS
- MEASURING TRANSDUCERS
- ANALOG PANEL METERS (DIN INSTRUMENTS)
- DIGITAL CLAMP-ON METERS
- INDUSTRIAL PROCESS and POWER CONTROLLERS
- CHART and PAPERLESS RECORDERS
- POWER CONTROL UNITS AND SOLIDE-STATE RELAYS
- 1-PHASE and 3-PHASE WATT-HOUR METERS
- ELEMENTS OF INTEGRATION SYSTEMS
- ACCESSORIES for MEASURING INSTRUMENTS (SHUNTS)
- MEASURING SYSTEMS (ENERGY, HEAT, CONTROL)
- CUSTOM – MADE PRODUCTS ACCORDING CUSTOMER'S REQUIREMENTS

**MEASUREMENT
CONTROL
RECORDING**

WE ALSO OFFER OUR SERVICES IN THE PRODUCTION OF:

- ALUMINIUM ALLOY PRESSURE CASTINGS
- PRECISION ENGINEERING and THERMOPLASTICS PARTS
- SUBCONTRACTING of ELECTRONIC DEVICES (SMT)
- PREASSURE CASTINGS and OTHER TOOLS

QUALITY PROCEDURES:

According to ISO 9001 and ISO 14001 international requirements.
All our instruments have CE mark.
For more information, please write to or phone our Export Department.



Lubuskie Zakłady Aparatów Elektrycznych LUMEL S.A.

ul. Sulechowska 1,

65-022 Zielona Góra - Poland

tel.: (48-68) 329 51 00 (exchange)

fax.: (48-68) 329 51 01

e-mail: lumel@lumel.com.pl

<http://www.lumel.com.pl>

Export Department:

Tel.: (48-68) 329 53 02 or 53 04

Fax.: (48-68) 325 40 91

e-mail: export@lumel.com.pl